

Care In Use



ZWIESEL FORTESSA



CHURCHILL

Zwiesel glass combines exceptional brilliance with durability designed for professional use. With the right handling, washing and storage, your glassware will retain its clarity, performance and appearance for longer.

CLEANING

- ☒ Only wash glasses that are labelled as "dishwasher-safe" or "dishwasher-suitable" in a commercial glasswasher.
- ☒ Special glasswashing machine with circulated detergent solution as well as fresh water rinse and rinse aid solution recommended.
- ☒ Temperature in the cleaning tank must be at least 55°C for hygienic reasons.
- ☒ Maximum rinse temperature must not exceed 65°C or be below 50°C.
- ☒ Use a commercial glasswashing cycle of approximately 90 seconds; following the machine manufacturers instructions.
- ☒ Depending on the water quality, softening, partial or full demineralisation is recommended.
- ☒ Check filter inserts, nozzles and spray arms for cleanliness.
- ☒ Use of plastic baskets or sheathed wire baskets recommended for secure holding of glasses. Baskets with appropriate compartment division and height to match our glasses are available.
- ☒ Improper placement of the glasses in the glass baskets or contact between glasses can cause scratches.
- ☒ Open the dishwasher immediately after washing. Do not leave glasses in the dishwasher overnight.

DISH TOWEL

- ☒ Use dish towels made of lint-free material. Pure linen or microfiber are best.
- ☒ Never use your polishing cloth for other purposes to avoid odour and grease residue.
- ☒ Launder dish towels without adding starch and fabric softener as a general rule.
- ☒ Try Zwiesel special polishing cloths for perfect cleaning – we will be pleased to provide further information.

POLISHING

- ☒ Avoid leaving fingerprints when taking glasses out of the dishwasher.
- ☒ Lift glasses by their stem or foot when removing them.
- ☒ Polish the bowl and foot of thin-walled and handmade glasses separately to avoid breakage.
- ☒ Never hold the glass by the base plate when cleaning the bowl. The pressure may lead to breaking the stem.
- ☒ Hands must be absolutely clean. Keep paper towels near the dishwasher to encourage hand washing and drying.
- ☒ Never breathe on glasses or spray them with cleaning agents. Lightly moisten them with water vapour instead.

INSPECTION

- ☒ Visually inspect your polishing results by carefully holding the glass up to light.

STORAGE

- ☒ Avoid placing drinking glasses on top of each other in the cupboard, as this can lead to scratches and glass breakage, especially at the top rim.
- ☒ Allow your glasses to cool to room temperature before pouring cold beverages.

FEATURES & BENEFITS



Dishwasher
Safe



Food Safe



Clarity &
Brilliance

Churchill China (UK) Ltd

No 1, Marlborough Way, Tunstall, Stoke-on-Trent, ST6 5NZ Tel: +44(0)1782 524358

Email: info@churchill1795.com Website: www.churchill1795.com